

# TECOAIR PORTABLE AIR CONDITIONER

## PUSH/PULL WINDOW KIT TPPWKITT



www.teco.com.au




## INSTALLATION INSTRUCTIONS

### PUSH OUT WINDOW TYPE

It is recommended to seal all four (4) sides around the window. Adjust the fabric to fit the parameter of the window ( $a+b+c+d$ ).



1. Apply the adhesive tape provided around the parameter of both frame and window.
2. After applying the tape, it is recommended to install the fabric seal from the opening (d for Fig. 1 or a for Fig. 2).

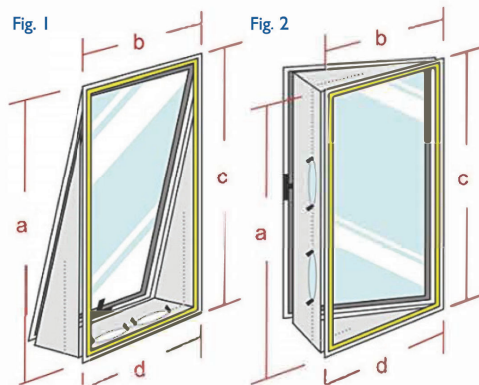


### PULL IN WINDOW TYPE

It is recommended to seal three (3) sides around the window. Adjust the fabric to fit the sides of the window ( $a+b+c$ ).

1. Apply the adhesive tape provided around the edge of both frame and window.
2. After applying the tape, it is recommended to install the fabric seal from the opening (a for Fig. 3 or b for Fig. 4).

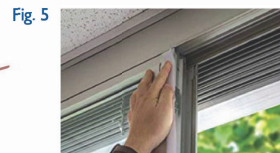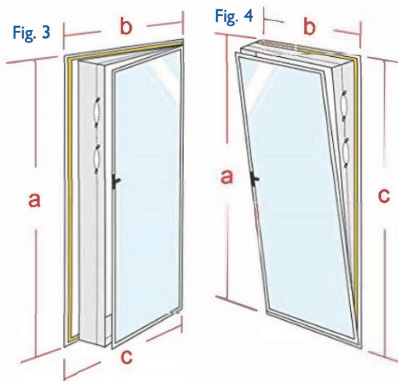


Apply the supplied adhesive tape to the frame.

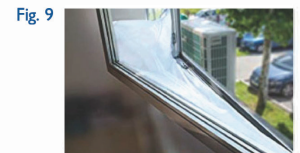


Attach the fabric seal to the tape around the edges (from Fig. 5 and Fig. 6)




Apply the supplied adhesive tape to the window frame.

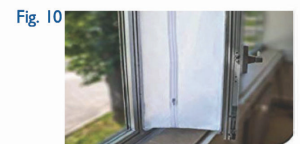

Align both sides. Ensure they are evenly applied to create a seal.

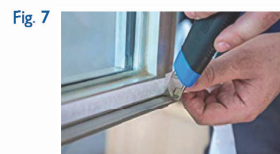

Trim the excess tape after applying to the frame and the window frame.

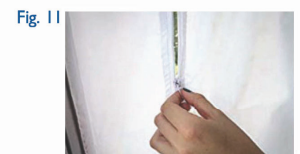

Unzip the fabric seal in preparation for the exhaust hose.



Join the ends of the tape to ensure a complete seal.



Place the exhaust hose through the fabric seal. Zip both sides of the exhaust hose to create the seal.

